

## Snake Magic Cap v.3.0 BETA Installation guide



Aftermarket parts:

- \* SNAKE Distributor Cap replacement with built-in COP unit
- \* SNAKE Ignitor Unit replacement
- \* SNAKE Rotor replacement


### Prepare Your Distributor



Uninstall parts from OEM distributor:

- \* OEM Coil
- \* OEM Ignitor unit
- \* OEM Rotor

## Install SNAKE Ignitor Unit

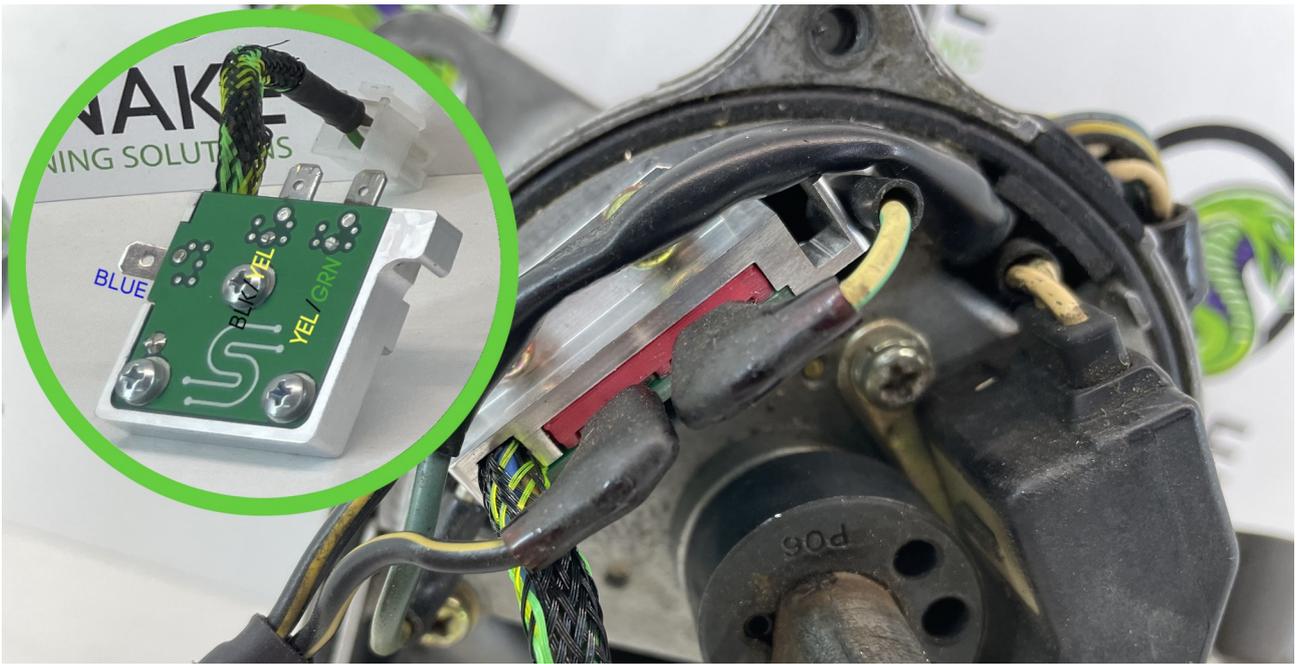

- \* Install SNAKE Ignitor unit to distributor
- \* Connect 3 internal distributor wires to ignitor unit as shown on picture

## Insulate +12V power wire

**WARNING:** BLK/YEL wire connected to +12V Power. Insulation required.



- \* Use 5mm (0.2 in) heatshrink tube to insulate wire with ring terminal.


## Install SNAKE Rotor




\* Use SNAKE rotor and OEM rotor Bolt.

**Set your distributor type. «Type A» or «Type C»**

**WARNING: If you set incorrect distributor type - car won't start!**

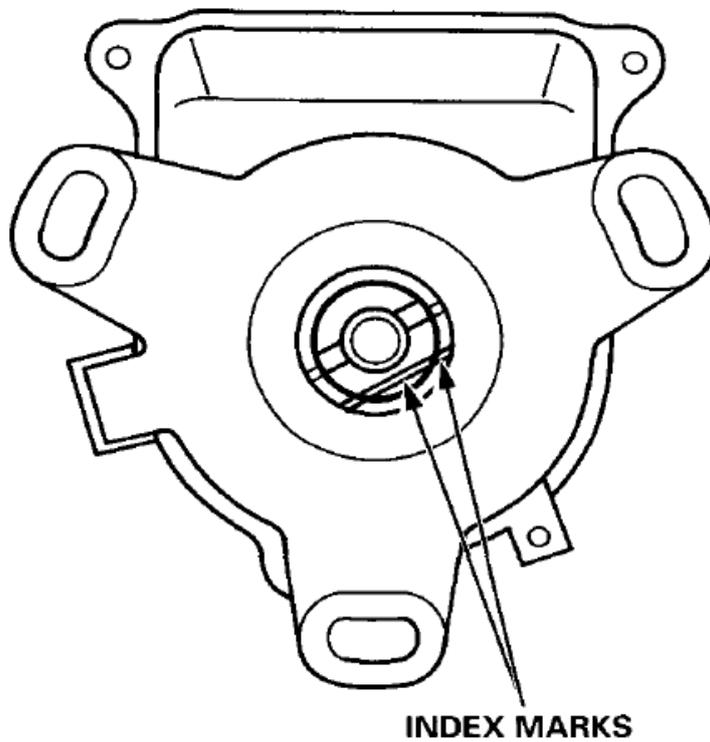

\* Align the index mark on the distributor housing with the index mark on the end of the shaft

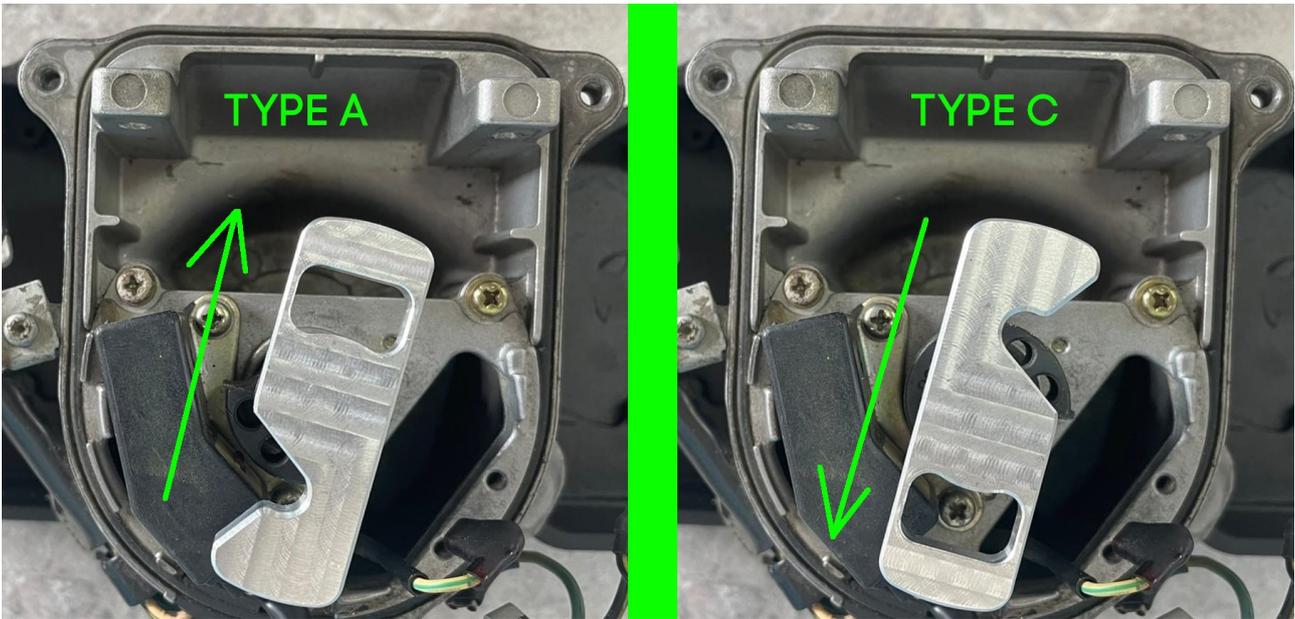


- \* Turn distributor to the front side. Rotor will show your distributor type
- \* H22, H23, F20B usually is Type A
- \* B16, B18, B20, D15, D16 usually is Type C



- \* Connect white connector to «Type A» or «Type C»

## Install distributor Cap

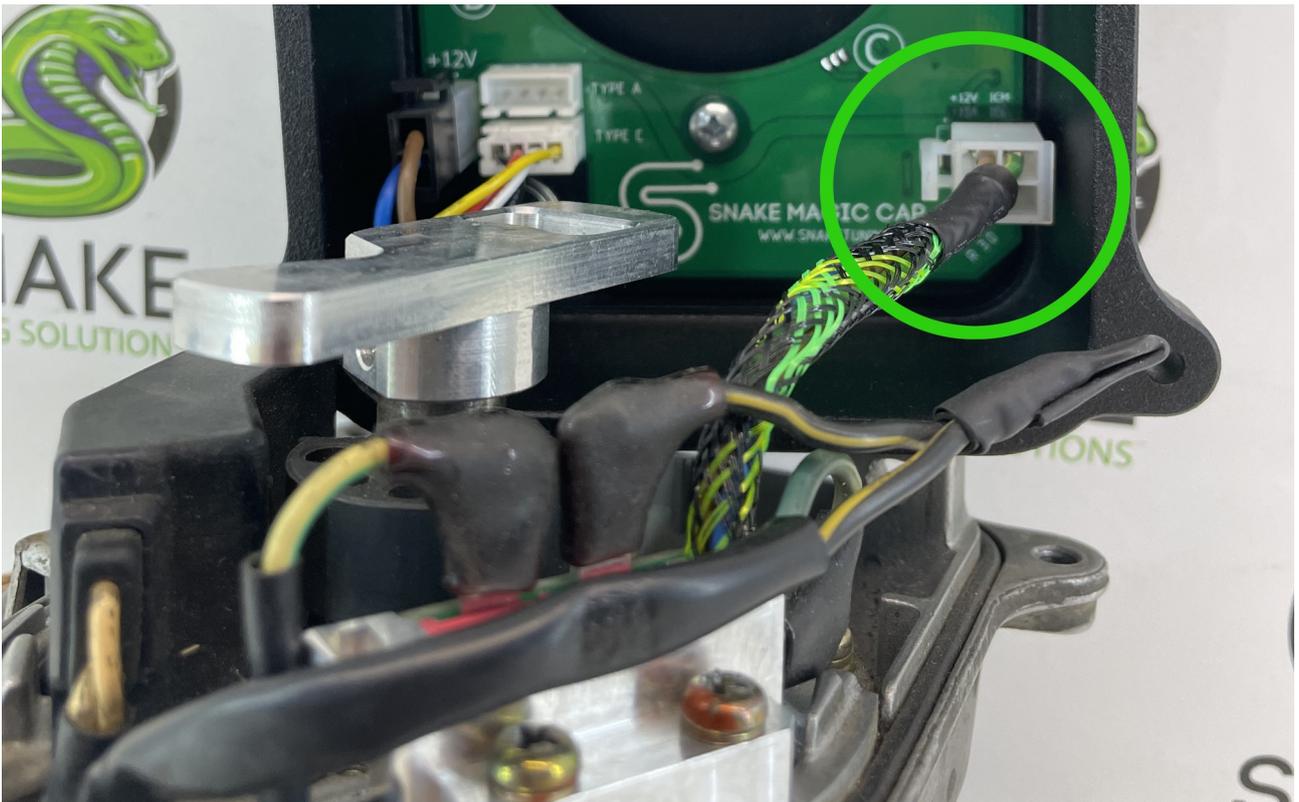

- \* Connect 4 pin connector from Ignitor unit to Cap
- \* Install Cap to distributor housing

