

Self diagnostic procedure



* SNAKE MagicCap v3.0 can indicate different trouble codes as blinks

DTC 0: NO Blinks, solid LED = NO ERRORS Detected

DTC 1: No signal from A hall sensor

DTC 2: No signal from B hall sensor

DTC 3: No signal from C hall sensor

DTC 4: No signal from D hall sensor

DTC 5: No rotor installed

DTC 6: No signal ICM (ECU Fault)

* Self Diagnostic Procedure

1. Turn ignition ON

2. Crank car at least 3 seconds

3. Check DTC's on Self diagnostic LED

WARNING. After Power OFF all DTC's will be erased